
CLASS 3 TRAILER HITCH R3-0160 Jeep Liberty

TOOLS REQUIRED: WRENCHES: Ratchet, Torque Wrench, Socket Extension, 18mm, 19mm Sockets

HITCH RATING: 5,000 LBS WEIGHT CARRYING, 500 LBS TONGUE WEIGHT / 7,500 LBS WEIGHT DISTRIBUTING, 750 LBS TONGUE WEIGHT. WARNING: CONSULT VEHICLE OWNERS MANUAL FOR TOWING RECOMMENDATIONS. DO NOT EXCEED VEHICLE'S RECOMMENDED TOWING CAPACITY. THIS PRODUCT IS DESIGNED FOR TRAILER TOWING ONLY AND SHOULD NOT BE USED FOR ANY OTHER PURPOSE.

NOTE: INSTALL PARTS LOOSELY UNTIL ALL ATTACHMENTS HAVE BEEN MADE TO VEHICLE

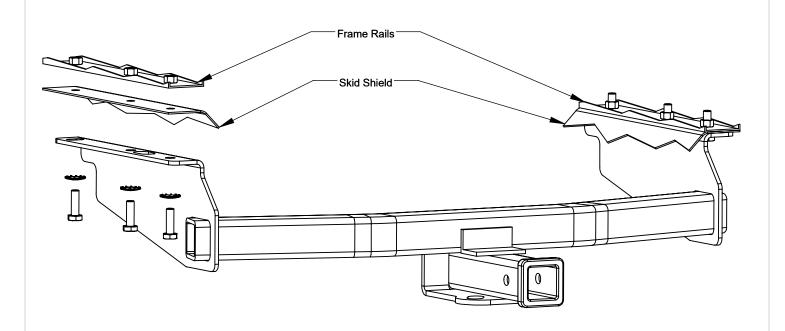

- 1. If the vehicle is equipped with a fuel tank skid shield, remove and discard the six M12 fasteners. The skid shield will be sandwiched between the frame rails and the hitch.
- 2. Raise the hitch into position and secure with the six M12 x 1.75 x 40 hex bolts and conical washers provided. If the vehicle is equipped with the fuel tank skid shield reinstall the shield sandwiching it between the frame rails and the hitch.
- 3. Tighten all fasteners to 68 LB-FT.

Thank you for purchasing a Rigid Hitch

Hardware Package:

- (6) M12 x 1.75 x 40mm Hex Bolts
- (6) 1/2" Conical Washers

GIVE THIS INSTRUCTION SHEET TO VEHICLE OWNER



THIS PRODUCT COMPLIES WITH SAFETY SPECIFICATIONS AND REQUIREMENTS FOR SAE AND VESC REGULATION V-5 FOR CONNECTING DEVICES AND TOWING SYSTEMS. DO NOT MODIFY THIS PRODUCT. INSTALL ONLY ON SPECIFIED VEHICLES IN GOOD CONDITION.

